


ATOL 100, 120, 1012

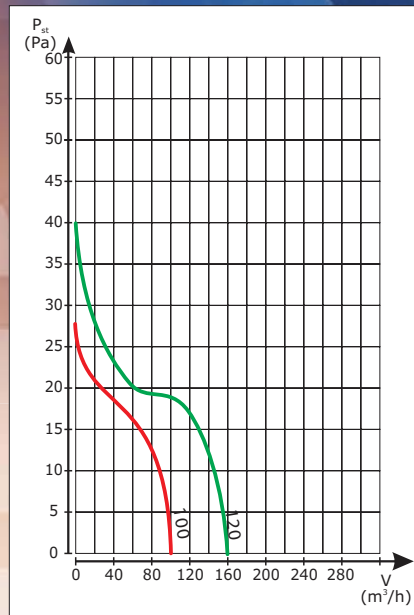

MODEL	P	W	F	T	H	A
ATOL 100	+	+	-	-	-	-
ATOL 100 B	-	-	-	-	-	-
ATOL 100 T	-	-	+	+	-	-
ATOL 100 FT	-	-	-	+	-	-
ATOL 100 HT	-	-	-	+	+	-
ATOL 100 A	+	+	-	-	-	+
ATOL 100 AB	-	-	-	-	-	+
ATOL 100 AT	-	-	+	+	-	+
ATOL 100 AFT	-	-	-	+	-	+
ATOL 100 AHT	-	-	-	+	+	+
ATOL 1012	-	-	-	-	-	-
ATOL 120	+	+	-	-	-	-
ATOL 120 B	-	-	-	-	-	-
ATOL 120 T	-	-	+	+	-	-
ATOL 120 FT	-	-	-	+	-	-
ATOL 120 HT	-	-	-	+	+	-
ATOL 120 A	+	+	-	-	-	+
ATOL 120 AB	-	-	-	-	-	+
ATOL 120 AT	-	-	+	+	-	+
ATOL 120 AFT	-	-	-	+	-	+
ATOL 120 AHT	-	-	-	+	+	+

P - pull cord switch, **W** - cable with a plug,
F - photocell, **T** - time switch,
H - adjustable humidity sensor, **A** - automatic louver

Type	Size [mm]				Weight [kg]	V	Hz	W	Reinforcement	Air flow [m^3/h]	Class	Protection	Acoustical pressure	rev. [1/min]
	A	B	C	D										
ATOL 100	153	153	95	100	0,65	230	50	19	flux	100	II	IP - X4	39 dB (A)	2500
ATOL 120	176	176	100	120	0,67	230	50	20	flux	150	II	IP - X4	42 dB (A)	2500
ATOL 1012	153	153	95	100	0,65	12	50	19	flux	100	II	IP - X4	39 dB (A)	2500

